
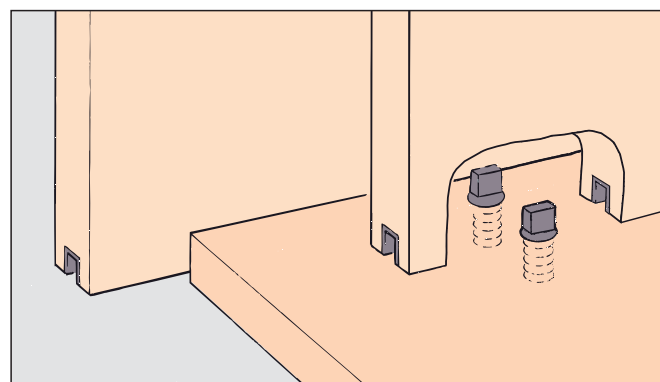


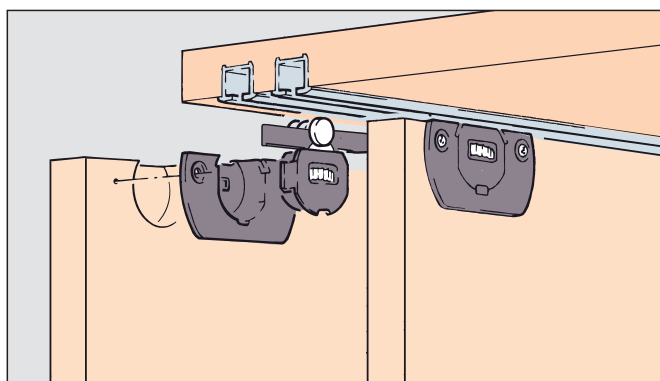


Garnituren/Sets/Garnitures

° mit Höhenjustierung/
with height adjustment/avec ajustage d'hauteur
°° ohne Höhenjustierung/
without height adjustment/sans ajustage d'hauteur

2 Türen
Doors
Portes

° No. 053.3115.071

°° No. 053.3115.072

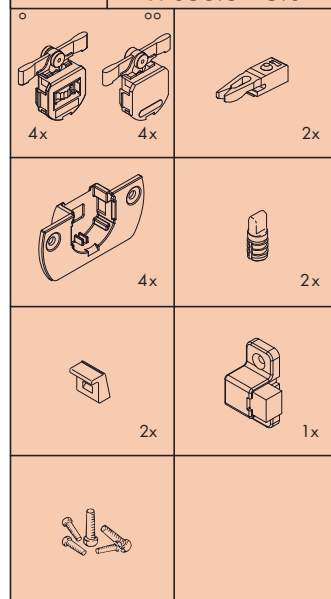

Zubehör / Accessories / Accessoires

A Einfachlaufschiene Alu, zum Verstemmen oder Kleben

Single running track aluminium, for press fitting or glue fixing

Rail de roulement simple en alu, à enfoncer ou à coller

Gr./Size

Art. No.

2500 mm


053.3007.250

3500 mm

053.3007.350

6000 mm

053.3007.600



B Einfachlaufschiene Alu, mit Drehriegel (nicht für Hartholz/MDF)

Single running track aluminium, with swivel lug (not for hard wood/MDF)

Rail de roulement simple en alu, avec verrou (pas pour bois dur/MDF)

2500 mm**


053.3008.250

3500 mm**

053.3008.350

6000 mm

053.3008.600



C Einfachlaufschiene Alu, gelocht, zum Schrauben

Single running track aluminium, pre-drilled, for screw fixing

Rail de roulement simple en alu, perforé, à visser

2500 mm**


053.3009.250

3500 mm**

053.3009.350

6000 mm

053.3009.600



D Einfachlaufschiene Alu eloxiert, gelocht, zum Aufschrauben

Single running track aluminium anodized, pre-drilled, surface mounted

Rail de roulement simple en alu anodisé, perforé, à visser en applique

2500 mm


053.3035.250

3500 mm

053.3035.350

6000 mm

053.3035.600



E Doppellaufschiene Alu, gelocht, zum Schrauben

Double running track aluminium, pre-drilled, for screw fixing

Rail de roulement double en alu, perforé, à visser

2500 mm


053.3315.250

3500 mm

053.3315.350

6000 mm

053.3315.600



Führungsschiene, Kunststoff anthrazit, 7 mm

Guide track, plastic anthracite, 7 mm

Rail de guidage, plastique anthracite, 7 mm

2500 mm


053.3012.250

3500 mm



053.3012.350

6000 mm


053.3012.600




** beidseitig ausgeklinkt/notched on both sides/encoché des deux côtés

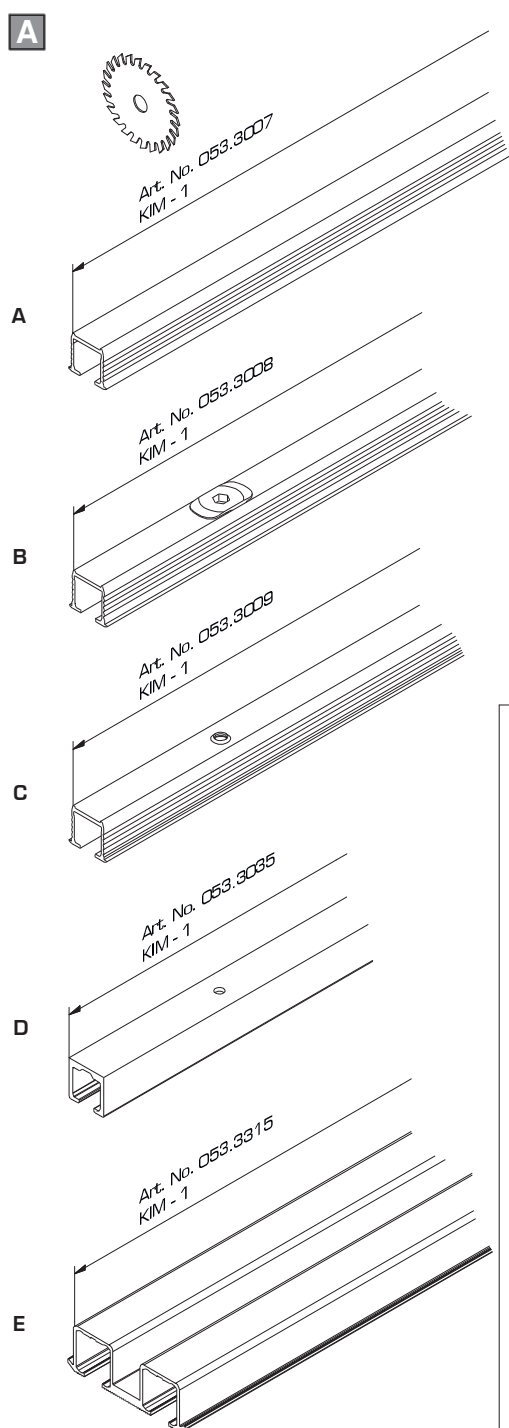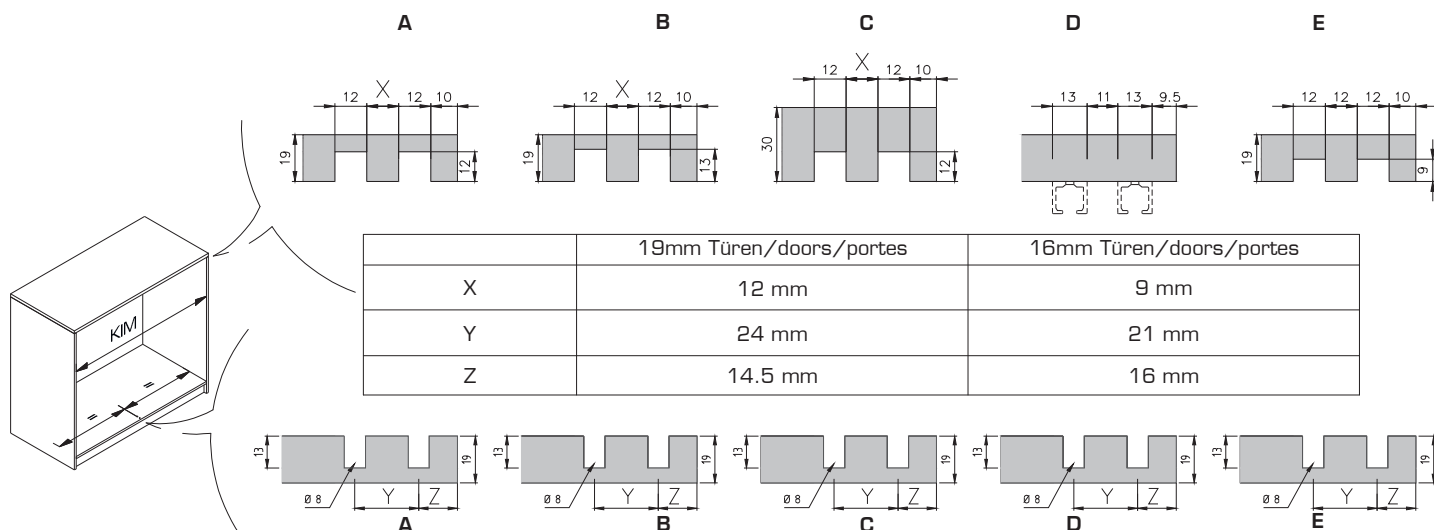


- A** **Zum Kleben**
For glueing
A collar
- B** **Mit Drehriegel © SW 4**
(nicht für Hartholz / MDF)
With swivel lug
(not for hard wood / MDF)
AVEC verrou
(pas pour bois dur / MDF)
- C** **Zum Schrauben** Ø 2.5 x 12
Screwed on
A visser
- D** **Zum Aufschrauben** Ø 2.5 x 16
Surface mounted
A visser en applique
- E** **Zum Schrauben** Ø 4 x 16
Screwed on
A visser

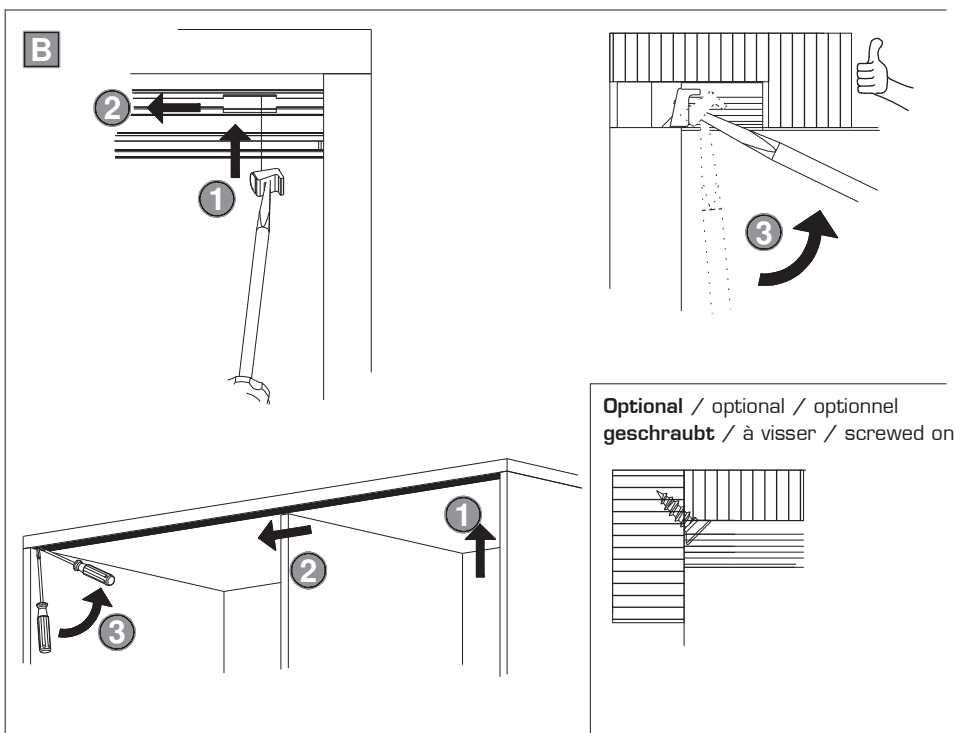


F

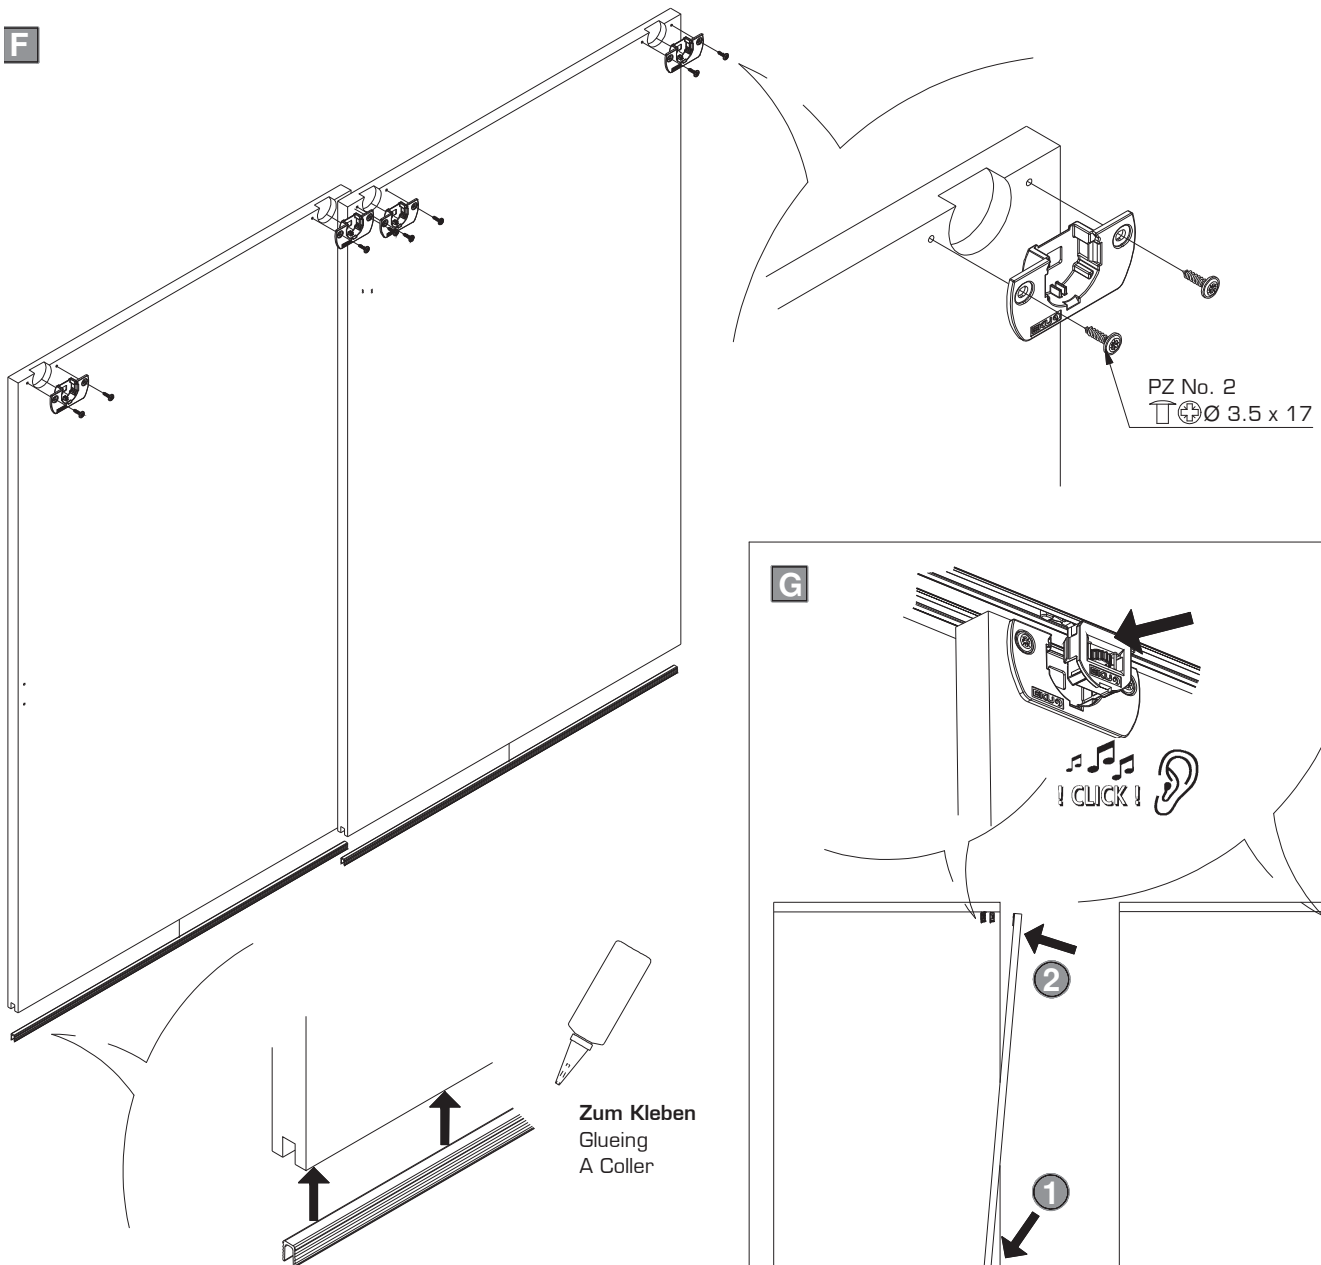


G

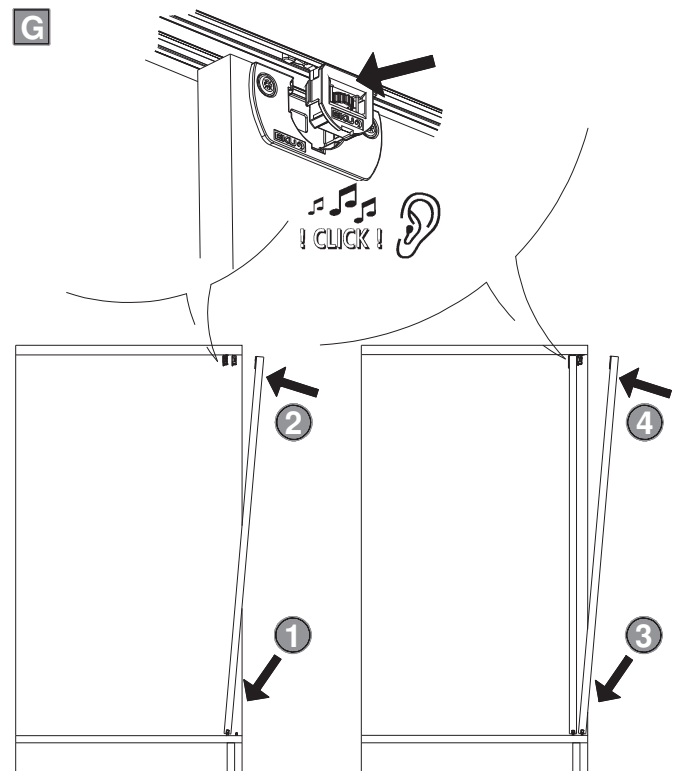

H

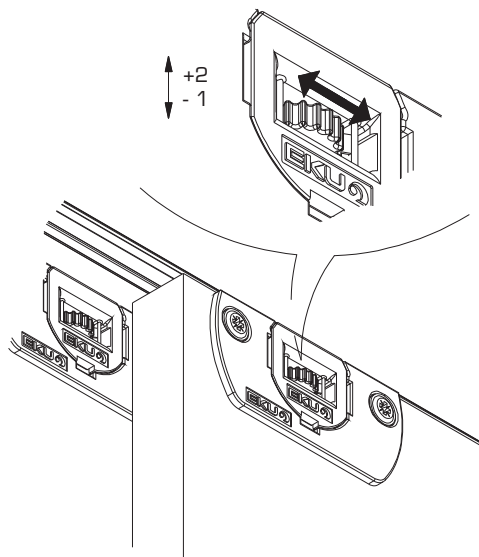


I

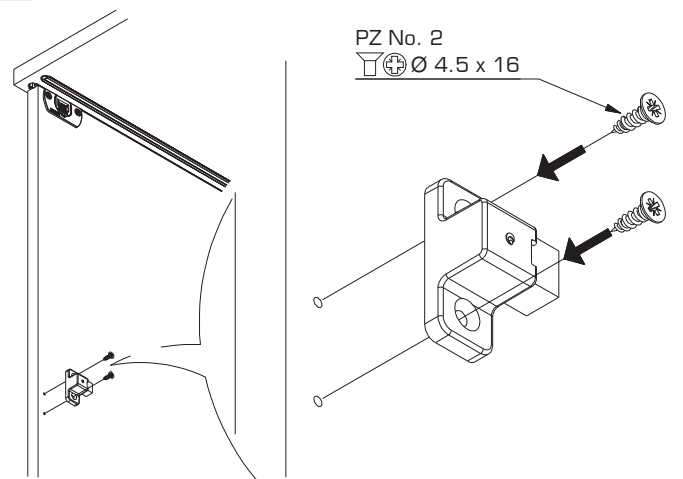

J Türdemontage


Door dismounting
Démontage de la porte

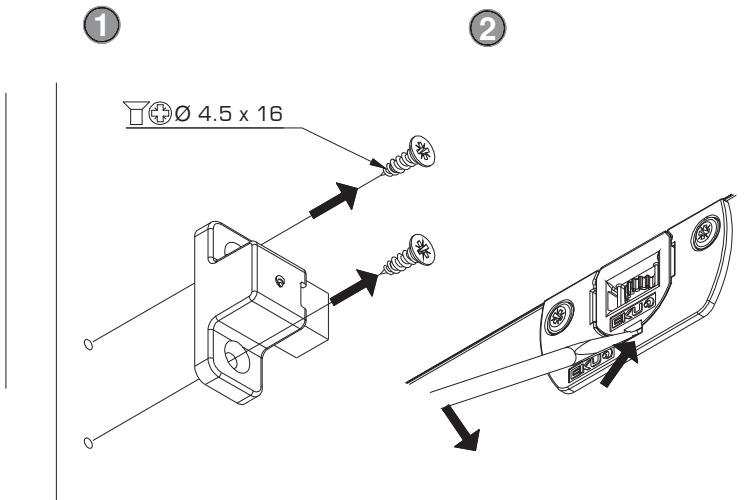

K Optional / Optional / Optionnel

Bei zurückversetzter Seitenwand Stopper unten setzen
Where doors overlap sidepanels, set stopper at the bottom
Placer la butée en bas si la paroi latérale est décalée par rapport à la Porte

Art. No. 053.3104.171 VE=2

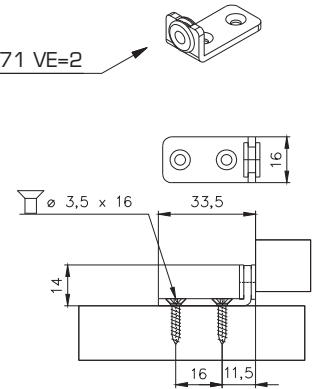

Einbaubeispiele / Mounting examples / exemples des montage

